
# MLX90395 Triaxis® Magnetometer Node

#### Datasheet

#### 1. Features and Benefits

- Triaxis<sup>®</sup> Hall Technology
- Automotive Grade (AEC-Q100)
- Micro-power with Programmable Duty Cycle
- Selectable Digital Output
  - 16-bit Magnetic (XYZ)
  - 16-bit Supply Voltage (V)
  - 14-bit Temperature (T)
- At runtime programmable modes
  - Single Measurement
  - Burst Mode up to 2kHz (XYZ)
  - Wake-up On Change (WOC) Mode
- Programmable Measurement Range & extended magnetic sensing range option
- On-chip magnetic calibration data allowing off-chip DSP to achieve maximum accuracy
- 8-bit measurement CRC
- Measurement Counter
- Selectable Bus Protocol Slave node
  - Up to 10MHz SPI or 1MHz I<sup>2</sup>C
- 48-bit unique ID Number
- RoHS Compliant & Green Packages



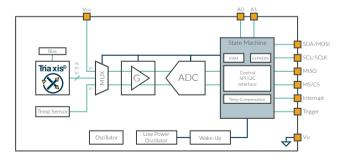

### 2. Application Examples

- HMI Non-Contacting Potentiometer
  - Joystick with Push
  - Rotary with Push
  - Linear (Long Stroke)
- Top-Column Module
  - Stalk Position/Function Sensor
- Center Stack
  - Shifter Position Sensor
  - Multimedia Rotary/Push Selector
  - Knobs / Levers
- Body Control
  - Door handle & door lock
  - Mirror position

## 3. Description

The MLX90395 Triaxis<sup>®</sup> Magnetic Node is a miniature monolithic sensor IC sensitive to the three orthogonal components of the flux density applied to the IC (i.e. B<sub>X</sub>, B<sub>Y</sub> and B<sub>Z</sub>) and to temperature. This allows the MLX90395 with the correct magnetic circuit to decode the absolute position of any moving magnet. It enables the design of novel generation of non-contacting position sensors that are frequently required for both automotive and industrial applications.

The MLX90395 selectable measurement data can be read over I<sup>2</sup>C or SPI bus. The sensor is runtime programmable and offers on-chip temperature compensation of the measured units. The selectable measurement duty cycle enables unsurpassed micro-power functionality. In this respect, the MLX90395 is the first true Software Defined Sensor: one IC, any magnetic sensing application. You define the function.





# 4. Ordering Information

Note: Ordering code BAA-x0x: not recommended for new designs.

Product	Temperature	Package	Option Code	Packing Form	Definition
MLX90395	K	DC	BAA-000	RE	Medium-Field Version (50mT)
MLX90395	K	GO	BAA-000	RE	Medium-Field Version (50mT)
MLX90395	K	LW	BAA-000	RE	Medium-Field Version (50mT)
MLX90395	K	DC	BAA-100	RE	High-Field Version (120mT)
MLX90395	K	GO	BAA-100	RE	High-Field Version (120mT)
MLX90395	K	LW	BAA-100	RE	High-Field Version (120mT)
MLX90395	K	DC	BBA-001	RE	Medium-Field Version (50mT)
MLX90395	K	GO	BBA-001	RE	Medium-Field Version (50mT)
MLX90395	K	LW	BBA-001	RE	Medium-Field Version (50mT)
MLX90395	K	DC	BBA-101	RE	High-Field Version (120mT)
MLX90395	K	GO	BBA-101	RE	High-Field Version (120mT)
MLX90395	K	LW	BBA-101	RE	High-Field Version (120mT)

# Legend:

Temperature Code:	K: from -40°C to 125°C				
Package Code:	"DC" for SOIC-8 package				
	"GO" for TSSOP-16 package (dual die)				
	"LW" for QFN-16 package (wettable flanks)				
Option Code - chip revision:	Bxx-abc				
	BAA: not recommended for new designs				
	B <b>BA</b> : standard version				
Option Code - application:	Bxx-abc:				
	a: Magnetic Sensing Range				
	0: Medium Field Version (50mT)				
	1: High Field Version (120mT)				
	<b>b</b> : N/A				
	c: SPI Filter				
	0: No filter (SPI frequency up to 10MHz)				
	1: 1MHz filter (SPI frequency up to 1MHz)				
Packing Form:	"RE" for Reel				
	"DC": 3000 pcs/reel				
	"GO": 4500 pcs/reel				
	"LW": 5000 pcs/reel				
Ordering Example:	"MLX90395KLW-BBA-101-RE"				
	For a 120mT sensing range 3D Magnetic Node in QFN-16 package, delivered in Reel.				

Table 1: Ordering information

#### Datasheet



## **Contents**

1. Features and Benefits	1
2. Application Examples	1
3. Description	
4. Ordering Information	2
5. Functional Diagram	6
6. Glossary of Terms	8
7. Pin Definitions	8
7.1. Pin Definition for SOIC-8 Package	8
7.2. Pin Definition for TSSOP-16 Package	8
7.3. Pin Definition for QFN-16 Package	9
8. Absolute Maximum Ratings	10
9. Isolation Specification	10
10. General Description	11
11. General Electrical Specification	12
12. Timing Specification	14
13. Temperature Specification	15
14. Voltage Specification	
15. Magnetic Field Requirements	16
15.1. Medium-Field Variant (-0xx code)	16
15.2. High-Field Variant (-1xx code)	16
16. Accuracy Specification	17
16.1. Medium-Field Variant (-0xx code)	17
16.2. High-Field Variant (-1xx code)	18
17. Functional Description	19
17.1. Operating Modes	19
17.1.1. Single Measurement	19
17.1.2. Burst Mode	19
17.1.3. Wake-up on Change Mode	20
17.2. Flow Chart	21
17.3. Status Byte	22
17.3.1. Data Ready - DRDY	22
17.3.2. Reset - RST	22

## MLX90395 Triaxis® Magnetometer Node

Datasheet



17.3.3. Single Bit Error Corrected - SEC	22
17.3.4. Double Bit Error Detected - DED	22
17.3.5. Overflow - OVF	23
17.3.6. Communication Error - CE	23
17.3.7. Measurement Counter	23
17.4. Measurement CRC	24
17.4.1. CRC calculation	24
17.5. Commands	25
17.6. SPI Communication	25
17.6.1. Command implementation	27
17.6.2. SPI Timing Specification	29
17.6.3. EMC filter (not re-programmable) - Not available in BAA version	29
17.7. I <sup>2</sup> C Communication	30
17.7.1. Command Implementation	30
17.7.2. I <sup>2</sup> C Timing Specification	32
18. Memory Structure and End-User Programmable Items	33
18.1. NVRAM Endurance	33
18.2. Memory Structure	33
18.3. Register Map	34
18.3.1. Default NVRAM content	36
18.4. Measurement Filters	37
18.5. Communication and I <sup>2</sup> C Filters	38
18.6. Sensitivity	39
18.7. Offset	40
18.8. Burst and WOC Parameters	40
18.9. Thermal Drift	40
18.10. External Trigger	41
18.11. NVRAM lock - Not available in BAA version	41
18.12. Other Controls	41
19. Recommended Application Diagrams	42
19.1. Wiring with the MLX90395 in SOIC-8/TSSOP-16 Package	42
19.1.1. SPI Mode	42
19.1.2. I <sup>2</sup> C Mode	44

## MLX90395 Triaxis® Magnetometer Node

Datasheet



19.2. Wiring with the MLX90395 in QFN-16 Package	45
19.2.1. SPI Mode	45
19.2.2. I <sup>2</sup> C Mode	47
20. Standard information regarding manufacturability of Melexis products with processes	
21. ESD Precautions	48
22. Package Information	49
22.1. SOIC-8 Package	49
22.1.1. SOIC-8 - Package Dimensions	49
22.1.2. SOIC-8 - Pinout and Marking	50
22.1.3. SOIC-8 - Sensitive Spot Location	50
22.2. TSSOP-16 Package	51
22.2.1. TSSOP-16 - Package Dimensions	51
22.2.2. TSSOP-16 - Pinout and Marking	52
22.2.3. TSSOP-16 - Sensitive Spot Location	52
22.3. QFN-16 Package	53
22.3.1. QFN-16 - Package Dimensions and Sensitive Spot Location	53
22.3.2. QFN-16 - Pinout and Marking (BAA version)	53
22.3.3. QFN-16 - Pinout and Marking (BBA version)	54
22.4. Package Thermal Performances	54
23. Contact	55
24 Disclaimer	55



## 5. Functional Diagram

The MLX90395 is sensitive to the three ( $B_X$ ,  $B_Y$ ,  $B_Z$ ) components of the flux density applied to the IC. This allows the MLX90395 with the correct off-chip signal processing to decode the absolute position of any moving magnet (e.g. rotary position from 0 to 360 Degrees, linear displacement, joystick... as shown in Figure 1). The flexibility resides in the runtime selection of measurement data and the application software in the external microcontroller, resulting in a true "Software-Defined Magnetic Sensor".

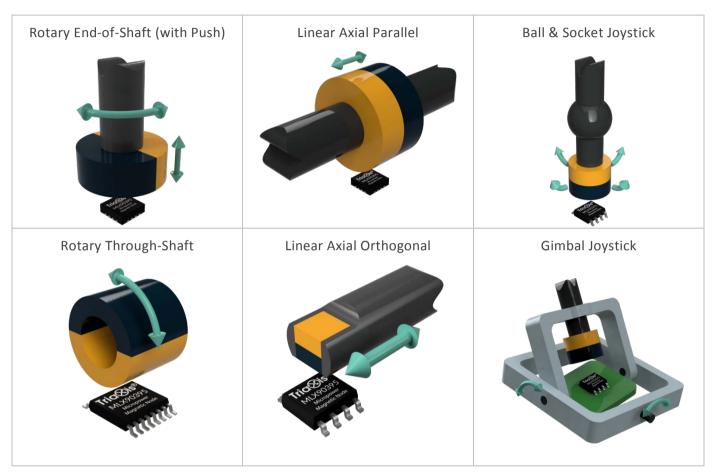


Figure 1: Magnetic Applications

As the MLX90395 has no on-board microcontroller, it lends itself well to applications requiring a concatenation of multiple sensors on the communication bus of a single microcontroller, allowing more cost-efficient and lean designs. Melexis' Applications Engineers can support in the microcontroller computations.

REVISION 5.0 - JUNE 18, 2020 Page 6 of 55



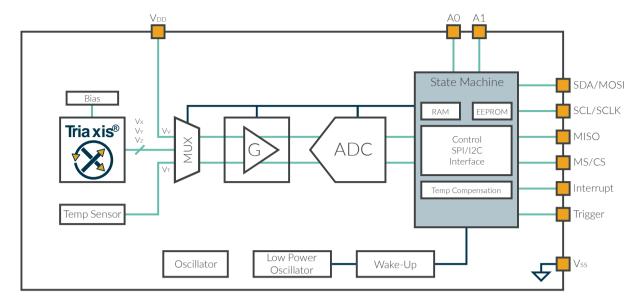


Figure 2: Block Diagram for the QFN-16 package

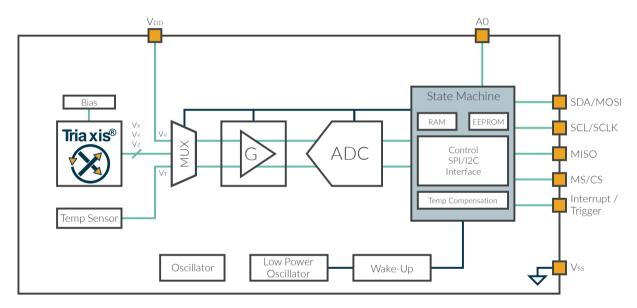


Figure 3: Block diagram for the SOIC-8 (single die) and TSSOP-16 (dual die) package

REVISION 5.0 - JUNE 18, 2020 Page 7 of 55



## 6. Glossary of Terms

Term	Description	Term	Description
Gauss (G), Tesla (T)	Units for the magnetic flux density: 1mT = 10G	EMC	Electro-Magnetic Compatibility
TC	Temperature Coefficient (in ppm/°C)	FIR	Finite Impulse Response
ADC	Analog-to-Digital Converter	OSR	Over Sampling Rate
DAC	Digital-to-Analog Converter	PWL	Piece Wise Linear
LSB	Least Significant Bit	POR	Power On Reset
MSB	Most Significant Bit	SW	Software
DNL	Differential Non-Linearity	HW	Hardware
INL	Integral Non-Linearity	IMC	Integrated Magnetic Concentrator
ASP	Analog Signal Processing	ROM	Read-only Memory
DSP	Digital Signal Processing	RAM	Random-access Memory
CDM	Charge Device Model	ESD	Electrostatic Discharge
HBM	Human Body Model		

Table 2: Glossary of Terms

## 7. Pin Definitions

## 7.1. Pin Definition for SOIC-8 Package

Pin #	Name (I <sup>2</sup> C)	Name (SPI)	Description
1	SCL	SCLK	[I] Bus clock
2	SDA	MOSI	[I/O] Bus Data / SPI Master Out Slave In
3	Not Used	MISO	[O] SPI Master In Slave Out
4	INT/TRG	INT/TRG	[O or I] Interrupt / Trigger Pin (Programmable)
5	A0	Not Used	[I] I <sup>2</sup> C Address Pin 0
6	Vss	Vss	[S] Ground
7	VDD	VDD	[S] Supply
8	MS	/CS	[I] Mode Select / Chip Select

Table 3: SOIC-8 Pin Definitions and Descriptions

For optimal EMC behaviour connect the unused pins (Not Used) to the Ground (See section 19.1). [I] stands for Input Pin, [O] stands for Output Pin and [S] stands for Supply Pin.

## 7.2. Pin Definition for TSSOP-16 Package

Pin #	Name (I <sup>2</sup> C)	Name (SPI)	Description
1	SCL <sub>1</sub>	SCLK <sub>1</sub>	[I] Bus clock
2	$SDA_1$	$MOSI_1$	[I/O] I <sup>2</sup> C Data / SPI Master Out Slave In
3	Not Used	$MISO_1$	[O] SPI Master In Slave Out
4	INT/TRG <sub>1</sub>	INT/TRG <sub>1</sub>	[O or I] Interrupt / Trigger Pin (Programmable)
5	A0 <sub>2</sub>	Not Used	[I] I <sup>2</sup> C Address Pin 0
6	VSS <sub>2</sub>	VSS <sub>2</sub>	[S] Ground
7	$VDD_2$	$VDD_2$	[S] Supply
8	$MS_2$	/CS <sub>2</sub>	[I] Mode Select / Chip Select
9	SCL <sub>2</sub>	SCLK <sub>2</sub>	[I] Bus clock

REVISION 5.0 - JUNE 18, 2020 Page 8 of 55



Pin #	Name (I <sup>2</sup> C)	Name (SPI)	Description
10	SDA <sub>2</sub>	MOSI <sub>2</sub>	[I/O] I <sup>2</sup> C Data / SPI Master Out Slave In
11	Not Used	MISO <sub>2</sub>	[O] SPI Master In Slave Out
12	INT/TRG <sub>2</sub>	INT/TRG <sub>2</sub>	[O or I] Interrupt / Trigger Pin (Programmable)
13	$A0_1$	Not Used	[I] I <sup>2</sup> C Address Pin 0
14	VSS <sub>1</sub>	VSS <sub>1</sub>	[S] Ground
15	VDD <sub>1</sub>	VDD <sub>1</sub>	[S] Supply
16	$MS_1$	/CS <sub>1</sub>	[I] Mode Select / Chip Select

Table 4: TSSOP-16 Pin Definitions and Descriptions

For optimal EMC behaviour connect the unused pins (Not Used) to the Ground (See section 19.1). [I] stands for Input Pin, [O] stands for Output Pin and [S] stands for Supply Pin.

## 7.3. Pin Definition for QFN-16 Package

Pin #	Name (I <sup>2</sup> C)	Name (SPI)	Description
1	INT	INT	[O] Interrupt
2	MS	/CS	[I] Mode Select / Chip Select
3	SCL	SCLK	[I] Bus clock
4	Not Used	Not Used	Not Connected
5	SDA	MOSI	[I/O] I <sup>2</sup> C Data / SPI Master Out Slave In
6	Not Used	MISO	[O] SPI Master In Slave Out
7	INT/TRG	INT/TRG	[O or I] Interrupt / Trigger Pin (Programmable)
8	Not Used	Not Used	Not Connected
9	Not Used	Not Used	Not Connected
10	Not Used	Not Used	Not Connected
11	A1	Not Used	[I] I <sup>2</sup> C Address Pin 1
12	A0	Not Used	[I] I <sup>2</sup> C Address Pin 0
13	Vss	Vss	[S] Ground
14	Not Used	Not Used	Not Connected
15	VDD	VDD	[S] Supply
16	Not Used	Not Used	Not Connected

Table 5: QFN-16 Pin Definitions and Descriptions

For optimal EMC behaviour connect the unused pins (Not Used) to the Ground (See section 19.2). [I] stands for Input Pin, [O] stands for Output Pin and [S] stands for Supply Pin.

REVISION 5.0 - JUNE 18, 2020



## 8. Absolute Maximum Ratings

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Supply Voltage	$V_{DD_{MAX}}$			4	V	<48h
Reverse Voltage Protection	$VDD_{REV}$	-0.3			V	<48h
Positive Output Voltage	Vout			4	V	<48h Vout <vdd+0.3v< td=""></vdd+0.3v<>
Negative Output Voltage	$Vout_{REV}$	-0.3			V	<48h
Positive Input Voltage (1)	Vin			4	V	<48h Vin <vdd+0.3v< td=""></vdd+0.3v<>
Negative Input Voltage	$Vin_{REV}$	-0.3			V	<48h
Operating Temperature	$T_{AMB}$	-40		+125	°C	Refer to the qualification profile
Junction Temperature	T <sub>J</sub>			+150	°C	
Storage Temperature	$T_{ST}$	-40		+150	°C	Refer to the qualification profile
Magnetic Flux Density	$B_{MAX}$	-1		+1	Т	
ESD voltage, HBM	$ESD_HBM$	-2		+2	kV	According AEC-Q100-002 DC and LW package code
ESD voltage, CDM	ESD <sub>CDM</sub>	-750		+750	V	According AEC-Q100-011 DC and LW package code

Table 6: Absolute Maximum Ratings

Exceeding the absolute maximum ratings may cause permanent damage. Exposure to absolute maximum-rated conditions for extended periods may affect device reliability.

## 9. Isolation Specification

Only valid for the package code GO, i.e. TSSOP-16 package (dual die).

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Isolation Resistance	R <sub>ISOL</sub>	4			ΜΩ	Between dies, measured between Vss <sub>1</sub> and Vss <sub>2</sub> with ±20V bias

Table 7: Isolation Specification

<sup>&</sup>lt;sup>1</sup> For shared [I/O] pin, maximum rating for output applies.




### 10. General Description

As described on the block diagram the three vector components of the magnetic flux density ( $B_X$ ,  $B_Y$  and  $B_Z$ ) applied to the IC are sensed through the sensor front-end. The respective Hall signals ( $V_X$ ,  $V_Y$  and  $V_Z$ ) are generated at the Hall plates and amplified.

The analog front-end is based on a fully differential analog chain featuring the classic offset cancellation technique (Hall plate 4 Phases spinning and chopper-stabilized amplification).

The conditioned analog signals are converted through a sigma-delta ADC (19 bits) and provided to a DSP block for further processing. The DSP stage is a custom finite state machine whose primary function consists of signal conditioning of the raw XYZ signals: offset & sensitivity adjustment and thermal offset & sensitivity drift compensation using the calibrated on-board temperature sensor. The result of these computations are a predetermined transfer characteristic of the sensor for a fixed gain setting.

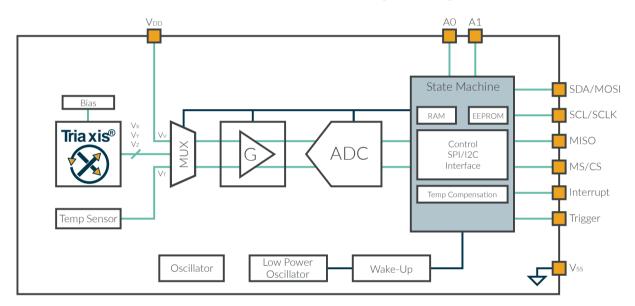

These 3D linear Hall measurements are made available to the communication bus master for readout. The supported communication protocols are both  $I^2C$  and SPI, where the Triaxis Magnetic Node is a slave on the bus. Upon readback, it is then up to the microcontroller to process the measurement data — either in a vectorial or a scalar way — in order to achieve more complex position sensing functionality required by the application.

When processing data in a vectorial (or angular) way, all signal amplitude variations due to the sensitivity imperfections of the sensor, as well as the flux density degradation of the permanent magnet over temperature are cancelled out. The magnetic vectorial information is intrinsically self-compensated vs. flux density variations. This feature allows therefore an improved thermal accuracy vs. position sensors based on conventional 1D linear Hall sensors.

Another advantage of vectorial versus scalar signal processing is extended absolute position sensing range and higher linearity for Axial Parallel linear stroke position sensing applications.

In addition to the improved thermal accuracy, the realized position sensor features excellent linearity performances taking into account typical manufacturing tolerances (e.g. relative placement between the Hall IC and the magnet).

REVISION 5.0 - JUNE 18, 2020 Page 11 of 55



## 11. General Electrical Specification

General electrical specifications are valid for temperature range: -40 - 125°C, supply voltage range: 2.6/3.0 - 3.6V unless otherwise noted (condition).

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Analog Supply Voltage	VDD	2.6	3.3	3.6	V	T <sub>A</sub> ≤ 90°C
Analog Supply Voltage	VDD	3.0	3.3	3.6	V	T <sub>A</sub> > 90°C
Supply Current <sup>(2)</sup>	$Idd.conv_{XY}$		2.3	3	mA	X-/Y-axis measurement
Supply Current <sup>(2)</sup>	Idd.conv <sub>z</sub>		3	4	mA	Z-axis measurement
Supply Current <sup>(2)</sup>	$Idd.conv_T$		1.6	2	mA	Temperature measurement
Supply Current <sup>(2)</sup>	Idd.conv <sub>V</sub>		1.6	2	mA	Voltage measurement
Idle Current (2, 3)	Idd.idle		1.4	9 (5)	μΑ	T <sub>A</sub> ≤ 85°C
			1.4	20	μΑ	T <sub>A</sub> within T <sub>AMB</sub>
Standby Current (2, 4)	Idd.stby		2.4	10 (5)	μΑ	T <sub>A</sub> ≤ 85°C
(2.5)			2.4	21	μΑ	T <sub>A</sub> within T <sub>AMB</sub>
Surge Current (2,5)	Isurge		25	250	mA	Startup current, <3μs
Power-On reset (rising)	VporLH	4.0	1.45	1.52	V	
Power-On reset (falling)	VporLH	1.3	1.39	75	V	CDA (AAOCL CCL (CCL))
Input High Threshold (5)	VIH	25		75	%VDD	SDA/MOSI, SCL/SCLK
Input Low Threshold (5)	VIL	25			%VDD	SDA/MOSI, SCL/SCLK
Input Level Hysteresis (5)	VIHYST	15	27		%VDD	SDA/MOSI, SCL/SCLK
Input High Threshold (5)	VIH			70	%VDD	INT/TRG, MS/CS
Input Low Threshold (5)	VIL	20			%VDD	INT/TRG, MS/CS
Input Level Hysteresis (5)	VIHYST	17	22		%VDD	INT/TRG, MS/CS
Input Capacitance (5)	Cin		5	30	pF	
Output Level High	VOH	98			%VDD	MISO, INT, INT/TRIG, SDA (Static, 1mA load)
Output Level Low	VOL			2	%VDD	MISO, INT, INT/TRIG, SDA (Static, 1mA load)
ON Resistance (5)	Rds.on	4	6	9	Ω	SDA
ON Resistance (5)	Rds.on	13	20	27	Ω	INT (NMOS and PMOS)
Output High Short Circuit Current (5)	IshortH	-60			mA	Vout forced to 0V
Output Low Short Circuit Current <sup>(5)</sup>	IshortL			110	mA	Vout forced to VDD

REVISION 5.0 - JUNE 18, 2020 Page 12 of 55

<sup>&</sup>lt;sup>2</sup> For the dual die version, the supply current is multiplied by 2.

<sup>&</sup>lt;sup>3</sup> Idle current is the current that is drawn by the IC in the IDLE mode, where it can only receive new commands on the communication bus, but all other blocks are disabled. The analog (excluding the power-on-reset block) is disconnected, only the digital IO part allows clocking of a few vital gates.

<sup>&</sup>lt;sup>4</sup> Standby current corresponds to the current consumed in the digital, where not the main oscillator is running which is used for analog sequencing, but only the low-power oscillator. This standby current is present in Burst mode or WOC mode; whenever the IC is counting down to start a new conversion.

<sup>&</sup>lt;sup>5</sup> Not covered by final test, based on characterization data.

## MLX90395 Triaxis® Magnetometer Node

Datasheet



Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Leakage Current <sup>(5)</sup>				20	nA	SDA
	lleak			0.1	nA	INT
	пеак			25	nA	MISO
				20	nA	SCLK, MS/CS

Table 8: Electrical Specification



## 12. Timing Specification

Timing conditions include the variations of supply, temperature and aging, unless specified.

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Main Oscillator Frequency	Fosc	0.95	1	1.05	MHz	T <sub>A</sub> = 35°C
Main Oscillator Thermal Drift	F <sub>OSC_TH</sub>	-5		5	%F <sub>osc</sub>	T <sub>A</sub> within T <sub>AMB</sub>
Low Power Oscillator Frequency	$F_{LPOSC}$	48	50	52	kHz	T <sub>A</sub> = 35°C
LP Oscillator Thermal Drift	F <sub>LPOSC_TH</sub>	-6		6	%F <sub>LPOSC</sub>	T <sub>A</sub> within T <sub>AMB</sub>
Reset Time (POR and RT command) <sup>(6)</sup>	$T_{POR}$		1.3	2.4	ms	Time from STARTUP to IDLE
Initialization Time (6)	T <sub>INIT</sub>		165		μs	Time from IDLE to start of conversion
Voltage Conversion Time (6)	$TCONV_{V}$	163		259	μs	VDD measurement F <sub>OSC</sub> = 1MHz
Temperature Conversion Time <sup>(6)</sup>	TCONV <sub>T</sub>	163		835 <sup>(7)</sup>	μs	Programmable Signal Integration Fosc = 1MHz
Magnetic Conversion Time (6)	$TCONV_M$	163		33347 <sup>(8)</sup>	μs	Programmable Signal Integration F <sub>OSC</sub> = 1MHz, single channel
Conversion Time (6)	TCONV		NV <sub>V</sub> + TCO TCONV <sub>M</sub> +1	-	μs	F <sub>OSC</sub> = 1MHz
Output Data Rate (6)	ODR <sub>DC</sub> ODR <sub>CONT</sub>	1/	1/(TCONV + T <sub>INIT</sub> ) 1/TCONV			Duty Cycled Operation Continuous Operation
Interval Time <sup>(6)</sup>	T <sub>INT</sub>	0		1260 <sup>(9)</sup>	ms	Time in between conversion cycles (F <sub>LPOSC</sub> = 50kHz)
Trigger Pulse Width <sup>(6)</sup>	$T_{TRIG}$	0.01		250	μs	Active High
Memory Store time (6)	T <sub>HS_WAIT</sub>			15	ms	T <sub>A</sub> within T <sub>AMB</sub>

Table 9: General Timing Specification

 $<sup>^{6}</sup>$  Not covered by final test, based on characterization data.

<sup>&</sup>lt;sup>7</sup> (2<sup>OSR2</sup>\*96)+67. See section 18.4 for more information about filters.

 $<sup>^{8}</sup>$   $m*{[(2+2^{DIGFILT})*2^{OSR}*32]+67}, m = selectable 0 to 3 (XYZ) axes. See section 18.4 for more information about filters.$ 

<sup>&</sup>lt;sup>9</sup> BURST DATA RATE\*20



## 13. Temperature Specification

The MLX90395 allows for measuring of the junction temperature for on-chip thermal compensations as well as off-chip thermal information within the application, provided there is proper modeling of the junction temperature to application temperature.

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Temperature Sensor Resolution	$T_{RES}$		50		LSB <sub>14</sub> /°C	
Temperature Sensor Output 0°C	T <sub>0</sub>		0		LSB <sub>14</sub>	
Temperature Sensor Output 35°C	T <sub>35</sub>		1750		LSB <sub>14</sub>	Calibration Temperature
Temperature Sensor Linearity	T <sub>LIN</sub>	-2		+2	°C	
Temperature Sensor Accuracy	$T_{ACC}$	0		+10	°C	T <sub>A</sub> ≤ 35°C
Temperature Sensor Accuracy	$T_{ACC}$	-1		+7	°C	$T_A > 35$ °C

Table 10: Temperature Specification

## 14. Voltage Specification

The MLX90395 allows for measurement of the supply voltage for ADC plausibility checks as well as for monitoring battery discharge in battery powered applications.

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Voltage Resolution	$V_{RES}$		5500		LSB <sub>16</sub> /V	
Voltage Output for 3V	$V_{3V}$		16500		LSB <sub>16</sub>	
Voltage Output for 2V	$V_{2V}$		11000		LSB <sub>16</sub>	
Voltage Linearity	$V_{LIN}$	-20		20	mV	
Voltage Accuracy	$V_{ACC}$	-200		200	mV	

Table 11: Voltage Specification



## **15. Magnetic Field Requirements**

This section describes the magnetic field requirements in order to meet the performance described in section 16.

### 15.1. Medium-Field Variant (-0xx code)

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Magnetic Flux Density in X or Y	B <sub>X</sub> , B <sub>Y</sub>			55 <sup>(10)</sup>	mT	$\sqrt{B_X^2 + B_Y^2}$
Magnetic Flux Density in Z	$B_{Z}$			130	mT	
IMC Gain in X and Y	$G_{IMC\_XY}$	1.5		1.8		
IMC Gain in Z	G <sub>IMC_Z</sub>	1		1.2		
k factor	k	1.3		1.7		$G_{IMC\_XY} / G_{IMC\_Z}$

Table 12: Magnetic field requirement for Medium-Field Variant

## 15.2. High-Field Variant (-1xx code)

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
Magnetic Flux Density in X or Y	B <sub>X</sub> , B <sub>Y</sub>			120 <sup>(10)</sup>	mT	$\sqrt{B_X^2 + B_Y^2}$
Magnetic Flux Density in Z	$B_Z$			130	mT	
IMC Gain in X and Y	$G_{IMC\_XY}$	0.4		0.6		
IMC Gain in Z	$G_{IMC_Z}$	1.1		1.2		
k factor	k	0.3		0.5		$G_{IMC_XY}/G_{IMC_Z}$

Table 13: Magnetic field requirement for High-Field Variant

\_

<sup>&</sup>lt;sup>10</sup> Above this value, the IMC starts saturating yielding to an increase of the linearity error



## 16. Accuracy Specification

## 16.1. Medium-Field Variant (-0xx code)

Magnetic Specifications (with **Melexis default factory programming**) are valid for temperature range: -40 - 125°C, supply voltage range: 2.6/3.0 - 3.6V unless otherwise noted (condition).

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
ADC Internal Resolution	N <sub>ADCINT</sub>		17.2		bits	
ADC External Resolution	$N_{ADCEXT}$		16		bits	
Sensing Range	B <sub>RANGE50</sub>		50		mT	
Offset	$X_0, Y_0, Z_0$	-150		150	LSB <sub>16</sub>	T <sub>A</sub> within T <sub>AMB</sub>
Sensitivity X- or Y-axis (11)	S <sub>XX50</sub> , S <sub>YY50</sub>		2.5 400		$\mu$ T/LSB <sub>16</sub> LSB <sub>16</sub> /mT	
Sensitivity Accuracy X- or Y-axis		-8		8	%	T <sub>A</sub> = 35°C
Sensitivity Temperature Coefficient X- or Y-axis	$T_{CSXY}$	-500		500	ppm/°C	T <sub>A</sub> within T <sub>AMB</sub>
Sensitivity Z-axis (12)	S <sub>ZZ50</sub>		2.5 400		$\mu$ T/LSB <sub>16</sub> LSB <sub>16</sub> /mT	
Sensitivity Accuracy Z-axis		-10		10	%	T <sub>A</sub> = 35°C
Sensitivity Temperature Coefficient Z-axis	T <sub>CSZ</sub>	-600		600	ppm/°C	T <sub>A</sub> within T <sub>AMB</sub>
Mismatch on the Raw Signals X, Y and Z $^{(13)}$	S <sub>MISMXY</sub> S <sub>MISMXZ</sub> S <sub>MISMYZ</sub>	-2 -5 -5		2 5 5	%	T <sub>A</sub> = 35°C
Thermal Drift of Sensitivity Mismatch		-3		3	%	T <sub>A</sub> within T <sub>AMB</sub>
Cross-Axis Sensitivity (intrinsic)	$S_{XYi}$ , $S_{YXi}$ , $S_{XZi}$ , $S_{ZXi}$ , $S_{YZi}$ , $S_{ZYi}$	-5		5	%	T <sub>A</sub> = 35°C
Noise				275 350 450	μT rms μT rms μT rms	$T_A = 35$ °C $T_A = 85$ °C $T_A = 125$ °C $0 \mu T$ field
Hysteresis				60	LSB <sub>16</sub>	T <sub>A</sub> = 35°C

Table 14: Accuracy Specification for Medium-Field Variant

<sup>&</sup>lt;sup>11</sup> Sensitivity can be adjusted with the parameter SENSXY, RESX and RESY. See section 18.6 for more details

<sup>&</sup>lt;sup>12</sup> Sensitivity can be adjusted with the parameter SENSZ and RESZ. See section 18.6 for more details

<sup>&</sup>lt;sup>13</sup> Die rotation tolerances (tilt die) of +/-2° included



## 16.2. High-Field Variant (-1xx code)

Magnetic Specifications (with **Melexis default factory programming**) are valid for temperature range: -40 - 125°C, supply voltage range: 2.6/3.0 - 3.6V unless otherwise noted (condition).

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
ADC Internal Resolution	N <sub>ADCINT</sub>		17.2		bits	
ADC External Resolution	$N_{ADCEXT}$		16		bits	
Sensing Range	B <sub>RANGE120</sub>		120		mT	
Offset	$X_0, Y_0, Z_0$	-150		150	LSB <sub>16</sub>	T <sub>A</sub> within T <sub>AMB</sub>
Sensitivity X- or Y-axis (14)	S <sub>XX120</sub> , S <sub>YY120</sub>		7.14 140		$\mu$ T/LSB <sub>16</sub> LSB <sub>16</sub> /mT	
Sensitivity Accuracy X- or Y-axis		-8		8	%	$T_A = 35$ °C
Sensitivity Temperature Coefficient X- or Y-axis	$T_{CSXY}$	-500		500	ppm/°C	T <sub>A</sub> within T <sub>AMB</sub>
Sensitivity Z-axis (15)	S <sub>ZZ120</sub>		7.14 140		$\mu$ T/LSB <sub>16</sub> LSB <sub>16</sub> /mT	
Sensitivity Accuracy Z-axis		-10		10	%	T <sub>A</sub> = 35°C
Sensitivity Temperature Coefficient Z-axis	T <sub>CSZ</sub>	-600		600	ppm/°C	T <sub>A</sub> within T <sub>AMB</sub>
Mismatch on the Raw Signals X, Y and Z $^{(16)}$	S <sub>MISMXY</sub> S <sub>MISMXZ</sub> S <sub>MISMYZ</sub>	-2 -5 -5		2 5 5	%	T <sub>A</sub> = 35°C
Thermal Drift of Sensitivity Mismatch		-3		3	%	T <sub>A</sub> within T <sub>AMB</sub>
Cross-Axis Sensitivity (intrinsic)	$S_{XYi}$ , $S_{YXi}$ , $S_{XZi}$ , $S_{ZXi}$ , $S_{YZi}$ , $S_{ZYi}$	-5		5	%	T <sub>A</sub> = 35°C
Noise				1080 1250 1650	μT rms μT rms μT rms	$T_A = 35$ °C $T_A = 85$ °C $T_A = 125$ °C $0 \mu T$ field
Hysteresis				60	LSB <sub>16</sub>	T <sub>A</sub> = 35°C

Table 15: Accuracy Specification for High-Field Variant

 $<sup>^{14}</sup>$  Sensitivity can be adjusted with the parameter SENSXY, RESX and RESY. See section 18.6 for more details

 $<sup>^{15}</sup>$  Sensitivity can be adjusted with the parameter SENSZ and RESZ. See section 18.6 for more details

<sup>&</sup>lt;sup>16</sup> Die rotation tolerances (tilt die) of +/-2° included



### 17. Functional Description

#### 17.1. Operating Modes

The MLX90395 always acts as slave on the bus. It operates with 3 state machines:

- Measurement State Machine running off the Main Oscillator
- Low Power State Machine running off the Low Power Oscillator
- Communication State Machine running off the bus clock

The three operating modes are controlled and defined by the master. All modes can be enabled and disabled at runtime through the communication protocol. On reset, the device is in idle mode, waiting for commands.

The components (field in X, Y or Z direction, temperature and voltage) which are needed to be measured can be provided when sending the commands. The order of conversion is fixed, and components which are not needed are simply skipped.

It is the user's responsibility to read back the data and ensure that timings are met. The MLX90395 is purely a slave. Even in burst mode, the user is responsible to collect the data from the MLX90395.

Operating Mode	Start of Mode	End of Mode (Return to IDLE)	Measurement Data
Single	SM command	Measurement	Argument of SM command or BURST_SEL register content if empty argument
Measurement	TRG pin rising edge	finished	BURST_SEL register if empty argument, provided SM command has been issued once in the past
Burst Mode	SB command	EX command	Argument of SB command or BURST_SEL register content if empty argument
Wake-up On Change (WOC) Mode	SWOC command	EX command	Argument of SWOC command or BURST_SEL register content if empty argument

Table 16: Summary of the operating modes

### 17.1.1. Single Measurement

In single measurement mode, a single measurement is requested by the master through either the SM command or via a rising edge on the TRG pin. After finishing the measurement, the INT pin will go high and the MLX90395 will go back to idle mode. The measurement can be read out at any time by means of the RM command. This will clear the INT pin.

#### 17.1.2. Burst Mode

In burst mode, the MLX90395 will continuously make measurements. The mode is started with the SB command and can be ended with the EX command. Measurements are read by the RM command and the status byte will indicate the freshness of the data. The rate of measurements is programmable. Each time a measurement is finished, the INT pin will go high. Reading out the data will clear the INT pin. If the measurement is not read on time, it will be overwritten by the next measurement when ready. The INT pin will show again a rising edge when the set of measurements can be read out. As long as the INT pin is high, the data is ensured to be most recent and ready.

REVISION 5.0 - JUNE 18, 2020 Page 19 of 55

#### MLX90395 Triaxis® Magnetometer Node

Datasheet



In burst mode, the only allowed commands are RM and EX. In case a different command is sent, the status will show a communication error. In case of SPI, this status is sent right after the first byte is received (even for multi byte commands).

#### 17.1.3. Wake-up on Change Mode

In wake-up on change mode, the MLX90395 will continuously make measurements. The mode is started with the SWOC command and can be ended with the EX command. Measurements can be read by the RM command, and the status byte will indicate the freshness of the data. Also here the rate of measurements is programmable. This mode differs from the burst mode in the sense that the INT pin will not go high at each finish of measurements but go high only when a specific condition is met. This condition can be controlled by the user:

- Absolute mode: each measurement is compared with the initial one (first measurement after start of the WOC mode). If the difference is larger than the threshold, then the INT pin goes high. The pin is cleared by the RM command.
- Differential mode: each measurement is compared with the previous one. If the difference is larger than the threshold, then the INT pin goes high. The pin is cleared by the RM command.

Comparisons are done on the 16-bit output data, independent of the resolution programmed.

In WOC mode, the only allowed commands are RM and EX. In case a different command is sent, the status will show a communication error. In case of SPI, this status is sent right after the first byte is received (even for multi byte commands).



#### 17.2. Flow Chart

The flow chart below shows the different states the sensor can be in and how they are related for different measurement types. In case of an exit command, the measurement is first finished, and the loop is ended via the SM path.

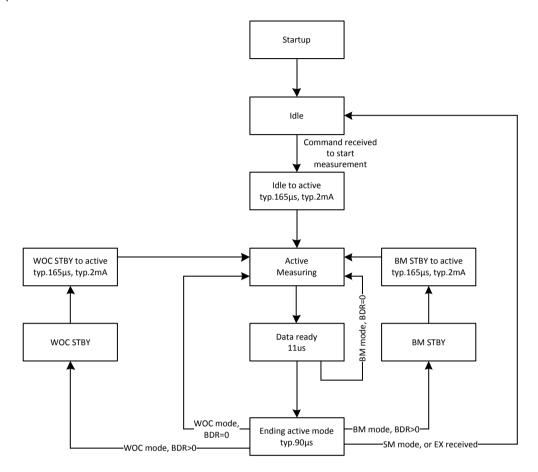


Figure 4: Flow Chart (BDR = BurstDataRate)

REVISION 5.0 - JUNE 18, 2020 Page 21 of 55



#### 17.3. Status Byte

A status byte is provided on nearly each command (RT does not return a status byte). Depending on the operating mode, the interpretation differs.

Mode	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Burst Mode	1	Meas	surement Co	unter	CE / DED	OVF	RST	DRDY
WOC Mode	0	1	0	0	CE / DED	OVF	RST	DRDY
SM Mode	0	0	1	0	CE / DED	OVF	RST	DRDY
Idle	0	0	0	0	CE / DED	OVF	RST	DRDY
Memory	0	0	0	0	CE / DED	SEC	RST	DRDY

Table 17: Status Byte

The SB command is always replied with a "Burst Mode" status, the SWOC command by a "WOC Mode" status. When the SM command is successfully received, an "SM Mode" status is given.

For the RM and RV command, the status returned purely depends on the mode in which the IC is operating. For single measurement mode, if the measurement is finished, the "Idle" status byte is given.

An EX command, when successfully received is replied with an "Idle" status byte.

Memory commands (HR, HS, RR and WR) are replied with the "Memory" status byte.

In case of an illegal command (RR in burst mode for example) then the status will be the one of the mode currently in, not necessarily the one associated with the command. The command got rejected, and the CE bit is set.

Melexis recommends verifying that the status byte matches the expected value.

#### 17.3.1. Data Ready - DRDY

This flag is set to 1 to indicate that new data is ready (not yet read), or when it is the first time that this data is being read. This flag is updated after the measurement is done.

In burst mode, there is a 10µs window just before the measurement (and measurement counter) is updated, where the flag is always zero, even if the data has not yet been read.

#### 17.3.2. Reset - RST

The reset flag is set whenever the IC has gone through a power-on reset (cold reset through VDD cycling or warm reset through RT command).

#### 17.3.3. Single Bit Error Corrected - SEC

If set, a single bit error is detected in the NVRAM, and the bit is corrected.

#### 17.3.4. Double Bit Error Detected - DED

If set, a double bit error is detected in the NVRAM. Once this bit is set, it will be latched until the problem is cleared (eg. by a write operation to the inconsistent register).

REVISION 5.0 - JUNE 18, 2020 Page 22 of 55

#### MLX90395 Triaxis® Magnetometer Node

Datasheet



#### 17.3.5. Overflow - OVF

If set, it indicates that the MSBit of the ADC (bit 18) is set. This situation should not occur, and could indicate a failure in the analog front-end of the IC.

#### 17.3.6. Communication Error - CE

This flag is set in case a communication error is detected. It can be that a wrong command is set (or too early), or a command which was not allowed on a specific operating mode.

#### 17.3.7. Measurement Counter

The 3-bit measurement counter is present in burst mode and is increased on each measurement. This allows the user to know if a measurement is missed when for example the RM commands are not in sync with the measurement rate.

REVISION 5.0 - JUNE 18, 2020



#### 17.4. Measurement CRC

The measured data is protected with a CRC in order to provide a data integrity check at master side. The CRC is implemented as 8-bit CRC-8-CCITT (polynomial 0x07) on the totality of the measured data. The calculation is always done with 10 bytes of data in the order X[15:8], X[7:0], Y[15:8], Y[7:0], Z[15:8], Z[7:0], T[15:8], V[7:0]. Components which are not measured are to be filled out with 0x00.

#### 17.4.1. CRC calculation

The below describes the CRC calculation. Also an example is provided to show the CRC calculation in action.

```
// Code
                                  // Example
crc = 0x00;
                                  crc = 0x00;
crc = CRC_TABLE[crc ^ X[15:8]];
                                  0x00 = CRC\_TABLE[0x00 ^ 0x00];
crc = CRC_TABLE[crc ^ X[7:0]];
                                  0x00 = CRC_TABLE[0x00 ^ 0x00];
crc = CRC_TABLE[crc ^ Y[15:8]];
                                  0x89 = CRC_TABLE[0x00 ^ 0x80];
                                  0xB6 = CRC_TABLE[0x89 ^ 0x00];
crc = CRC_TABLE[crc ^ Y[7:0]];
crc = CRC_TABLE[crc ^ Z[15:8]];
                                  0x0B = CRC\_TABLE[0xB6 ^ 0x00];
crc = CRC_TABLE[crc ^ Z[7:0]];
                                  0x31 = CRC_TABLE[0x0B ^ 0x00];
crc = CRC_TABLE[crc ^ T[15:8]];
                                  0x8C = CRC\_TABLE[0x31 ^ 0x05];
crc = CRC_TABLE[crc ^ T[7:0]];
                                  0x5F = CRC_TABLE[0x8C ^ 0x26];
crc = CRC TABLE[crc ^ V[15:8]];
                                  0x9A = CRC TABLE[0x5F ^ 0x00];
crc = CRC_TABLE[crc ^ V[7:0]];
                                  0xCF = CRC\_TABLE[0x9A ^ 0x00];
```

#### The CRC table is shown below

```
CRC\_TABLE[256] = {
    0x00, 0x07, 0x0E, 0x09, 0x1C, 0x1B, 0x12, 0x15,
    0x38, 0x3F, 0x36, 0x31, 0x24, 0x23, 0x2A, 0x2D,
    0x70, 0x77, 0x7E, 0x79, 0x6C, 0x6B, 0x62, 0x65,
    0x48, 0x4F, 0x46, 0x41, 0x54, 0x53, 0x5A, 0x5D,
    0xE0, 0xE7, 0xEE, 0xE9, 0xFC, 0xFB, 0xF2, 0xF5,
    0xD8, 0xDF, 0xD6, 0xD1, 0xC4, 0xC3, 0xCA, 0xCD,
    0x90, 0x97, 0x9E, 0x99, 0x8C, 0x8B, 0x82, 0x85,
    0xA8, 0xAF, 0xA6, 0xA1, 0xB4, 0xB3, 0xBA, 0xBD,
    0xC7, 0xC0, 0xC9, 0xCE, 0xDB, 0xDC, 0xD5, 0xD2,
    OxFF, OxF8, OxF1, OxF6, OxE3, OxE4, OxED, OxEA,
    0xB7, 0xB0, 0xB9, 0xBE, 0xAB, 0xAC, 0xA5, 0xA2,
    0x8F, 0x88, 0x81, 0x86, 0x93, 0x94, 0x9D, 0x9A,
    0x27, 0x20, 0x29, 0x2E, 0x3B, 0x3C, 0x35, 0x32,
    0x1F, 0x18, 0x11, 0x16, 0x03, 0x04, 0x0D, 0x0A,
    0x57, 0x50, 0x59, 0x5E, 0x4B, 0x4C, 0x45, 0x42,
    0x6F, 0x68, 0x61, 0x66, 0x73, 0x74, 0x7D, 0x7A,
    0x89, 0x8E, 0x87, 0x80, 0x95, 0x92, 0x9B, 0x9C,
    0xB1, 0xB6, 0xBF, 0xB8, 0xAD, 0xAA, 0xA3, 0xA4,
    0xF9, 0xFE, 0xF7, 0xF0, 0xE5, 0xE2, 0xEB, 0xEC,
    0xC1, 0xC6, 0xCF, 0xC8, 0xDD, 0xDA, 0xD3, 0xD4,
    0x69, 0x6E, 0x67, 0x60, 0x75, 0x72, 0x7B, 0x7C,
    0x51, 0x56, 0x5F, 0x58, 0x4D, 0x4A, 0x43, 0x44,
    0x19, 0x1E, 0x17, 0x10, 0x05, 0x02, 0x0B, 0x0C,
    0x21, 0x26, 0x2F, 0x28, 0x3D, 0x3A, 0x33, 0x34,
    0x4E, 0x49, 0x40, 0x47, 0x52, 0x55, 0x5C, 0x5B,
    0x76, 0x71, 0x78, 0x7F, 0x6A, 0x6D, 0x64, 0x63,
    0x3E, 0x39, 0x30, 0x37, 0x22, 0x25, 0x2C, 0x2B,
    0x06, 0x01, 0x08, 0x0F, 0x1A, 0x1D, 0x14, 0x13,
    0xAE, 0xA9, 0xA0, 0xA7, 0xB2, 0xB5, 0xBC, 0xBB,
    0x96, 0x91, 0x98, 0x9F, 0x8A, 0x8D, 0x84, 0x83,
    OxDE, OxD9, OxD0, OxD7, OxC2, OxC5, OxCC, OxCB,
    0xE6, 0xE1, 0xE8, 0xEF, 0xFA, 0xFD, 0xF4, 0xF3
```

REVISION 5.0 - JUNE 18, 2020 Page 24 of 55



#### 17.5. Commands

In the commands with zyxt in their first byte, the zyxt is used to select which components need to be measured (set corresponding bit to 1). zyxt = 0x0 results in all components being measured according the settings of VmeasEn and BurstSel (X, Y, Z, T and V). Else, the components of the zyxt argument are measured. With temperature compensation enabled, the temperature will always be measured. However depending on the argument zyxt, it can be read out or not (for CRC calculation it will be 0x0). Recommended is to do the measurement and the read command with the same zyxt argument.

It is <u>not</u> allowed to use the Reset command (RT) during any mode (Single Measurement Mode, Burst Mode, WOC Mode). The Exit Mode command (EX) has to be used to end a mode. The Reset command can be applied at least 1ms following the Exit command, if required.

Name	Symbol	#	CMD Byte #1	CMD Byte #2	CMD Byte #3	CMD Byte #4
Start Burst Mode	SB	1	0b0001 zyxt	N/A	N/A	N/A
Start WOC Mode	SWOC	2	0b0010 zyxt	N/A	N/A	N/A
Start Single Measurement Mode	SM	3	0b0011 zyxt	N/A	N/A	N/A
Read Measurement (SPI)	RM	4	0b0100 zyxt	N/A	N/A	N/A
Read Register (SPI)	RR	5	0b0101 dddd <sup>(17)</sup>	REG[5:0] << 2	N/A	N/A
Write Register (SPI)	WR	6	0b0110 dddd <sup>(17)</sup>	DATA[15:8]	DATA[7:0]	REG[5:0] << 2
Exit Mode	EX	8	0b1000 0000	N/A	N/A	N/A
Read Voltage	RV	С	0b1100 dddd <sup>(17)</sup>	N/A	N/A	N/A
Memory Recall	HR	D	0b1101 dddd <sup>(17)</sup>	N/A	N/A	N/A
Memory Store	HS	Ε	0b1110 dddd <sup>(17)</sup>	N/A	N/A	N/A
Reset	RT	F	0b1111 0000	N/A	N/A	N/A

Table 18: Command overview

Register access is always done per word (=2 bytes).

In SPI commands, the register equals the word-address, and is shifted by two bits to the left. To access register 0x01, the corresponding command byte becomes 0x04.

For I<sup>2</sup>C, the RR and WR commands do not exist, but direct register access is available through the I<sup>2</sup>C protocol. More information is found in section 17.7.

#### 17.6. SPI Communication

The SPI protocol is of mode 3, which means that data is clocked on rising edge of the clock and the clock is at a high level in idle (CPOL=1, CPHA=1). MSbits are sent first. CS must be high after command completion and whenever the IC is not communicated with. With CS low the IC will wait for communication to occur.

Note that MISO and MOSI can be shorted together to allow for 3-wire SPI (mind the increased capacitance). This implies that the SPI output of MLX90395 is half-duplex. There is one danger, in case of an illegal command with more than 1 command byte, the IC immediately sends out the status byte after receiving the

 $<sup>^{17}</sup>$  d stands for "don't care". These bits are not checked and can be both 0 and 1.

## MLX90395 Triaxis® Magnetometer Node

Datasheet



first byte. This leads to a collision on the bus. Illegal commands like this are RR and WR in burst or WOC mode. Always allow the current measurement to be finished too after sending the EX command, before sending other commands.

REVISION 5.0 - JUNE 18, 2020



#### 17.6.1. Command implementation

For the examples give, the below convention is used.



Figure 5: SPI convention

#### 17.6.1.1. SB, SWOC, SM, EX, HR, HS

All the commands follow the structure below. The reply from the MLX90395 is only the status byte. The example below is for a start of a burst mode with X and Y being measured.




Figure 6: SB command, XY

After the HS command, wait at least 15ms before sending the next command to allow the IC to update the NVRAM correctly.

#### 17.6.1.2. RT

This command will (warm-)reset the IC. The status byte of the command following will indicate the reset event.



Figure 7: RT command

#### 17.6.1.3. RM

This command differs depending on the value for zyxt. In case it is different than 0, the data is returned in the order Status-T-X-Y-Z-CRC, where the components which are set to zero are skipped. In case zyxt is 0, the returned order is Status-CRC-X-Y-Z-T-V (none skipped, unmeasured data is set to 0). The below three examples show this.




Figure 8: RM command, XYZTV

REVISION 5.0 - JUNE 18, 2020 Page 27 of 55






Figure 9: RM command, XYZT




Figure 10: RM command, YT

#### 17.6.1.4. RR

Important in this command is that the register address to be read needs to be shifted left by two bits. To read register 0x12 for example, the MOSI byte becomes 0x48.




Figure 11: RR command

#### 17.6.1.5. WR

Important in this command is that the register address to be read needs to be shifted left by two bits. To read register 0x12 for example, the MOSI byte becomes 0x48.



Figure 12: WR command

#### 17.6.1.6. RV

In case RM with 0 as zyxt is done, V can be returned. To get the data faster without the X, Y, Z and T (all zero) also being clocked out, the RV command can be used.



Figure 13: RV command



## 17.6.2. SPI Timing Specification

All timings are referred to the levels found in Table 8.

Electrical Parameter	Symbol	Min.	Max.	Unit
SPI Clock Cycle	t <sub>c</sub> (SPC)	100		ns
SPI Clock Cycle	t <sub>c</sub> (SPC)		10	MHz
CS Setup Time	t <sub>su</sub> (CS)	5		ns
CS Hold Time	t <sub>h</sub> (CS)	10		ns
SDI Input Setup Time	t <sub>su</sub> (SI)	5		ns
SDI Input Hold Time	t <sub>h</sub> (SI)	15		ns
SDO Valid Output Time	t <sub>v</sub> (SO)		50	ns
SDO Output Hold Time	t <sub>h</sub> (SO)	5		ns
SDO Output Disable Time	t <sub>dis</sub> (SO)		50	ns

Table 19: General SPI Timing Specification

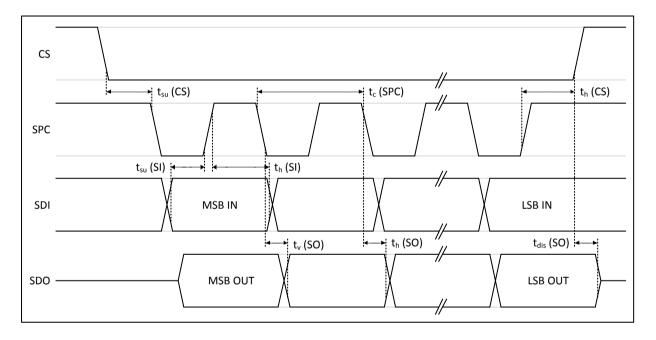


Figure 14: SPI Timing Diagram

## 17.6.3. EMC filter (not re-programmable) - Not available in BAA version

An RC filter is enabled on the SPI communication input lines. The impact of this filter is that 1MHz is the maximum SPI clock frequency that the IC accepts. For other filter configurations, please contact Melexis.

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition
SCLK RC Filter Bandwidth	$BW_{1MHz}$	2		4	MHz	
CS RC Filter Bandwidth	BW <sub>CS</sub>	3.6		9.5	MHz	
MOSI RC Filter Bandwidth	<b>BW</b> <sub>MOSI</sub>	4.75		9.15	MHz	

Table 20: SPI RC Filter Specifications

This feature is **not available in the BAA** version.

REVISION 5.0 - JUNE 18, 2020 Page 29 of 55



### 17.7. I<sup>2</sup>C Communication

The I<sup>2</sup>C protocol is implemented such that the command is written to a specific register (0x80) in the RAM, and the status and measurement data are read back from this RAM. The commands themselves are the same as for SPI (section 17.5) except for the read measurement commands and the memory read/write commands. For memory read/write commands, register access is provided directly through the I<sup>2</sup>C protocol. Note that memory read/write commands are required to be word-wise, so always in multiples of 2 bytes. The I2C protocol uses the byte address instead of the word address. Because a word contains 2 bytes, the byte address is double that of the word address or register. Hence in the I<sup>2</sup>C, the corresponding command byte becomes the register shifted by 1 bit to the left.

Read measurement is the same as a memory read, except starting from the status register. MSbits are sent first.

The 7-bit I<sup>2</sup>C-address is determined by the connection to the A0 and A1 pins. The 5 MSBs are programmed by Melexis in the MLX90395. Please contact Melexis in case other addressing is required.

	7-bit I <sup>2</sup> C address							
7	6	5	4	3	2	1	0	
0	0	0	1	1	0 if A1 shorted to ground 1 if A1 shorted to supply	0 if A0 shorted to ground 1 if A0 shorted to supply	0 for I <sup>2</sup> C write 1 for I <sup>2</sup> C read	

#### 17.7.1. Command Implementation

For the examples given, the below convention is used.

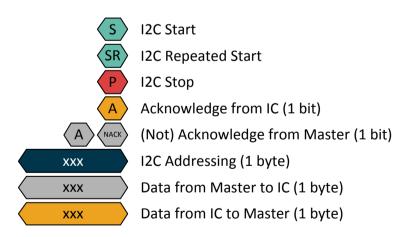


Figure 15: I<sup>2</sup>C Convention

#### 17.7.1.1. SB, SWOC, SM, EX, HR, HS

All the commands follow the structure below. The reply from the MLX90395 is only the status byte. The example below is for a start of a burst mode with X and Y being measured.



Figure 16: SB command, XY

REVISION 5.0 - JUNE 18, 2020 Page 30 of 55

Datasheet



After the HS command, wait at least 15ms before sending the next command to allow the IC to update the NVRAM correctly.

#### 17.7.1.2. RT

This command will (warm-)reset the IC. The status byte of the command following will indicate the reset event.



Figure 17: RT command

#### 17.7.1.3. RM

All values which are not measured are 0x00.




Figure 18: RM command

#### 17.7.1.4. RR

Important in this command is that the register address to be read needs to be shifted left by one bit. To read register 0x12 for example, the SDA byte becomes 0x24.



Figure 19: RR command

#### 17.7.1.5. WR

Important in this command is that the register address to be written needs to be shifted left by one bit. To write register 0x12 for example, the SDA byte becomes 0x24.



Figure 20: WR command

#### 17.7.1.6. RV

In case RR with 0 as zyxt is done, only V will be returned. To get the data faster without the X, Y, Z and T (all zero) also being clocked out, the RV command can be used.



Figure 21: RV command



# 17.7.2. I<sup>2</sup>C Timing Specification

All timings are referred to the levels found in Table 8.

Electrical Parameter	Symbol	I <sup>2</sup> C Standa	rd Mode	I <sup>2</sup> C Fast Mode Plus		Unit
Electrical Farameter	Symbol	Min.	Max.	Min.	Max.	
SCL Clock Frequency	f (SCL)		100		1000	kHz
SCL Clock Low Time	t <sub>w</sub> (SCLL)	4.7		0.5		μs
SCL Clock High Time	t <sub>w</sub> (SCLH)	4		0.26		μs
SDA Setup Time	t <sub>su</sub> (SDA)	250		50		ns
SDA Data Hold Time	t <sub>h</sub> (SDA)		3.45	0	0.45	μs
SDA and SCL Rise Time	t <sub>r</sub> (SDA) t <sub>r</sub> (SCL)		1000	20+0.1*C <sub>b</sub> <sup>(18)</sup>	120	ns
SDA and SCL Fall Time	t <sub>r</sub> (SDA) t <sub>r</sub> (SCL)		300	20+0.1*C <sub>b</sub> <sup>(18)</sup>	120	ns
START Condition Hold Time	t <sub>h</sub> (ST)	4		0.26		μs
REPEATED START Condition Setup Time	t <sub>su</sub> (SR)	4.7		0.26		μs
STOP Condition Setup Time	t <sub>su</sub> (SP)	4		0.26		μs
Bus Free Time Between STOP and START Condition	t <sub>w</sub> (SP:ST)	4.7		0.5		μs

Table 21: General I<sup>2</sup>C Timing Specification

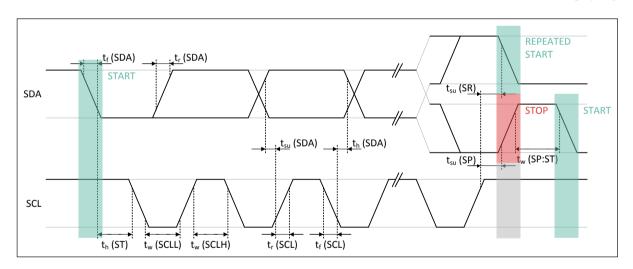


Figure 22: I<sup>2</sup>C Timing Diagram

 $<sup>^{18}</sup>$  Where  $C_b$  is the total bus capacitance (in pF)



### 18. Memory Structure and End-User Programmable Items

#### 18.1. NVRAM Endurance

The NVRAM is qualified to guarantee an endurance of minimum 1000 write cycles (store operations) at 125°C (for engineering/calibration purpose).

If operated above 90°C with less than 3.0V supply, the performance of the NVRAM is not guaranteed.

#### 18.2. Memory Structure

The MLX90395 has 1kbit of non-volatile memory, and the same amount of volatile memory. Each memory consists out of 64 addresses containing 16-bit words. The non-volatile memory has automatic 2-bit error detection and 1-bit error correction capabilities per address. The handling of such corrections & detections is explained in Section 17.3.

The memory is split in 2 areas:

- Customer area [address 0x00 to 0x1F]
- Melexis area [address 0x20 to 0x3F]

The RR and WR commands impact the volatile memory only, there no direct access possible to the non-volatile memory. The customer area of the volatile memory is fully accessible (read and write) to the customer; the Melexis area is write-protected and contains the 48-bit unique identification. Only modifications in the customer area are allowed with the WR command. The adjustments in the customer area can be stored in the permanent non-volatile memory with the store command HS, which copies the entire volatile memory to the non-volatile memory. With the HR command the non-volatile memory content can be recalled to the volatile memory, which can restore any modifications due to prior WR commands. The HR step is performed automatically at start-up of the IC, either through cold reset or warm reset with the RT command.

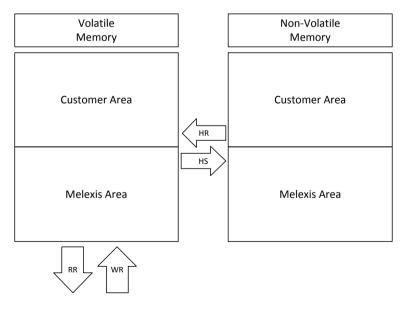


Figure 23: MLX90395 Memory Structure

REVISION 5.0 - JUNE 18, 2020 Page 33 of 55



## 18.3. Register Map

The table below gives an overview of the customer area in the MLX90395's NVRAM.

In the register map, the 16-bit words are split into 2 bytes for the sake of readability. The general format is shown below in the yellow table.  $^{(19)}$ 

Register	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0.4	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit O (LSB)
0x	Bit 15 (MSB)	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8

Register	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
0x00		GainS	el[3:0]			HallCo	onf[3:0]		
UXUU	Lock_HS	Lock_WR	Reserved <sup>(19)</sup>	TrimDelSD	AOut[1:0]	TrimDelSI	DAIn[1:0]	ZSeries	
0x01	BurstS	el[1:0]			BurstDataRate[5:0]				
UXUI	TrigIntSel	CommN	lode[1:0]	WOCDiff	ExtTrig	TCmpEn	Burst	:Sel[3:2]	
0x02	ResY[0]	ResX	[1:0]		DigFilt[2:0]		OS	R[1:0]	
0x02	OSR3	0x0	VMeasEn	OSR2	2[1:0]	ResZ	[1:0]	ResY[1]	
0x03				TRe	ef[7:0]				
0.003	-	-	-	-	- <sup>(19)</sup>	WOCStart	TRe	ef[9:8]	
0x04				SensT	TCH[7:0]				
0.04	-	-	-	-	-	-	-	SensTCH[8]	
0x05				Sens <sup>-</sup>	TCL[7:0]				
0,03	-	-	-	-	-	-	-	SensTCL[8]	
0x06					etX[7:0]				
0,00					tX[15:8]				
0x07	OffsetY[7:0]								
0,107					tY[15:8]				
0x08					etZ[7:0]				
					tZ[15:8]				
0x09					riftXL[7:0]				
					riftXH[7:0]				
0x0A					riftYL[7:0]				
					riftYH[7:0]				
0x0B					riftZL[7:0]				
					riftZH[7:0]				
0x0C		T	T	Sens	XY[7:0]	1			
	-	-	-	-	-	-	Sens	XY[9:8]	
0x0D		1	1		sZ[7:0]	T			
	-	-	-	-	-	-	Sen	sZ[9:8]	
0x0E					reshold[7:0]				
	WocXYThreshold[15:8]								

<sup>&</sup>lt;sup>19</sup> Cells marked with "-" can be overwritten. Reserved cells are not to be changed.



Register	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
0x0F		WocZThreshold[7:0]								
UXUF				WocZThr	eshold[15:8]					
0v10				WocTThr	eshold[7:0]					
0x10				WocTThre	eshold[15:8]					
0x11				WocVTh	reshold[7:0]					
UXII		WocVThreshold[15:8]								
0x12 - 0x1F Free										
OXIZ - UXIF		Free								

For the RM command in  $I^2C$ , the register can be accessed byte-wise, with automatic increment. No left shift (as compared to the RR and RM commands in  $I^2C$ ) is needed to access these registers.

Register I <sup>2</sup> C	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0x80				Comman	d/Status			
0x81				CRC-8	-CCITT			
0x82				X[1.	5:8]			
0x83				X[7	·:0]			
0x84				Y[1	5:8]			
0x85				Y[7	:0]			
0x86				Z[1	5:8]			
0x87				Z[7	:0]			
0x88				T[1	5:8]			
0x89		T[7:0]						
0x8A		V[15:8]						
0x8B				V[7	':0]			

Melexis stores a unique ID in every single IC. This ID is stored in the following registers (Read-Only):

Register	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
0x26	ID1[7:0]									
0x20				ID1[:	L5:8]					
0.27				ID2[	7:0]					
0x27				ID2[:	L5:8]					
0.438	ID3[7:0]									
0x28		ID3[15:8]								



#### 18.3.1. Default NVRAM content

Changing the default settings will impact the values in Table 12 and Table 13.

Parameter	Medium Field Version	High Field Version
HallConf	0	0
GainSel	9	8
ZSeries	0	0
TrimSelSDAIn	1	1
TrimSelSDAOut	0	0
Reserved	0 (keep zero) (20)	0 (keep zero) (20)
Lock_WR (not available in BAA)	0	0
Lock_HS (not available in BAA)	0	0
BurstDataRate	0	0
BurstSel	15 (0xF)	15 (0xF)
TCmpEn	1	1
ExtTrig	0	0
WOCDiff	0	0
CommMode	0	0
TrigIntSel	1	1
OSR	0	0
DigFilt	0	0
ResX	1	1
ResY	1	1
ResZ	1	1
OSR2	0	0
VMeasEn	0	0
OSR3	0	0
TRef	Trimmed to 35°C	Trimmed to 35°C
WOCStart (check paragraph 18.8)	0	0
SensTCH, SensTCL	Trimmed to 0ppm/°C	Trimmed to Oppm/°C
OffsetX, OffsetY, OffsetZ	Trimmed to OLSB	Trimmed to OLSB
OffsetDriftXL, OffsetDriftXH, OffsetDriftYL, OffsetDriftYH, OffsetDriftZH	Trimmed to OLSB/°C	Trimmed to OLSB/°C
SensXY, SensZ	Trimmed to 400LSB <sub>16</sub> /mT	Trimmed to 140LSB <sub>16</sub> /mT
WocXYThreshold, WocZThreshold, WocTThreshold, WocVThreshold	0	0

Table 22: Default NVRAM content

\_\_\_

 $<sup>^{20}</sup>$  If enabled, the magnetic measurements will be corrupted and current consumption is increased.



## 18.4. Measurement Filters

The MLX90395 has several options to filter the measurements. The first type is available for all components: the oversampling rate OSR) of the decimation filter at the ADC. OSR is for magnetic measurements, OSR2 for the temperature measurement and OSR3 for the voltage measurement. The second type is an averaging filter (DigFilt, averaging over  $2^{DigFilt}$  measurements) which is only present on the magnetic measurements.

Changing these parameters directly impacts the typical conversion time per measurement. This according the formulas below:

$$T_{mag}[\mu s] = 67 + 32 \cdot 2^{OSR} \cdot (2 + 2^{DigFilt})$$

$$T_{temp}[\mu s] = 67 + 96 \cdot 2^{OSR2}$$

$$T_{V}[\mu s] = 67 + 96 \cdot 2^{OSR3}$$

The MLX90395 offers a 2kHz 3-axis (magnetic) measurement or 2kHz 2-axis + temperature if the filter and oversampling rate are set to 0:

$$T_{3-axis} = 3 \cdot [67 + 32 \cdot 2^{0} \cdot (2 + 2^{0})] + 11 = 500 \,\mu s$$

$$T_{2-axis + temperature} = 67 + 96 \cdot 2^{0} + 2 \cdot [67 + 32 \cdot 2^{0} \cdot (2 + 2^{0})] + 11 = 500 \,\mu s$$

Note that with OSR=0, the three LSBits of the 19-bit ADC are 0. This is because they cannot be determined accurately in the short integration time.



# 18.5. Communication and I<sup>2</sup>C Filters

The communication mode in which the MLX90395 needs to respond to is selectable by CommMode.

CommMode	Accepted Protocol	MS pin
0b00 or 0b01	I <sup>2</sup> C and SPI (first come, first serve)	Keep high for I <sup>2</sup> C Use as Chip Select (CS) for SPI
0b10	SPI only	CS pin for SPI
0b11	I <sup>2</sup> C only	Keep high for 200 μs after POR, then don't care

Table 23: CommMode

Due to NXP's specification on  $I^2C$ , where is stated that the delay between SDA and SCL toggling can be  $0\mu s$ , there is a delay implemented on the SDA line (when data from  $\mu C$ ontroller to IC) to ensure that the IC can properly decode the commands. This parameter is called TrimDelSDAIn, and can be programmed as follows:

- 0b00: 70ns
- 0b01: 110ns (recommended)
- 0b10: 140ns0b11: 160ns

TrimDelSDAOut controls the delay (when data from IC to  $\mu$ Controller) between SCL switching from high to low and SDA toggling to the new data bit value. This is indicated on the below picture. The delay is also present on the acknowledge of the IC.




Figure 24: TrimDelSDAOut Definition

The delay is programmed follows:

- 0b00: 80ns (recommended)
- 0b01: 110ns0b10: 130ns
- 0b11: 150ns

Note: These delays are only active after a reset, so a memory store command is needed.



## 18.6. Sensitivity

The sensitivity in  $LSB_{16}$  out vs. magnetic field applied can be adjusted in the MLX90395 with several parameters. GainSel changes the gain stages before the input of the ADC. Table 24 provides the relative gain/attenuation for these 2 stages.

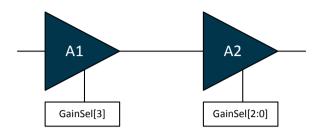


Figure 25: Gain Stages

GainSel[3]	GainSel[2:0]	Gain A1	Gain A2	Total Gain (A1 x A2)
0	0	1	0.2	0.2
0	1	1	0.25	0.25
0	2	1	1/3	1/3
0	3	1	0.4	0.4
0	4	1	0.5	0.5
0	5	1	0.6	0.6
0	6	1	0.75	0.75
0	7	1	1	1
1	0	0.5	0.2	0.1
1	1	0.5	0.25	0.125
1	2	0.5	1/3	1/6
1	3	0.5	0.4	0.2
1	4	0.5	0.5	0.25
1	5	0.5	0.6	0.3
1	6	0.5	0.75	0.375
1	7	0.5	1	0.5

Table 24: Relative Gain Table

SensXY and SensZ adjust the sensitivity after the ADC, so fully digital. SensXY and SensZ are always positive.

With ResX, ResY, and ResZ, 16 bits of the 19-bit ADC value can be selected. An increase of this parameter leads to a change in sensitivity by factor 2. Note that for resolution 2 and 3, the saturation of the analog chain becomes visible. The used span is 17.2 bits, of the 19 available bits.

For small adjustments, it is recommended to use SensXY, SensZ and the ResX, ResY, ReZ parameters. It is recommended to keep GainSel constant as an optimization is done to be at the optimal range at the input of the ADC. The default for resolution is 1, and for GainSel it is 9 for the medium field version and 8 for the high field version.

The relation on the measurements for SensXY and SensZ is given by the formula below:

$$MAG = MAG \times \left[1 + \frac{SensXY \ or \ SensZ}{2^9}\right]$$

#### MLX90395 Triaxis® Magnetometer Node

Datasheet



For ResX, ResY, and ResZ, the below figure shows the implementation:

	19-bit output (after corrections are applied)																	
18	17	16	15	5   14   13   12   11   10   9   8   7   6   5   4   3   2   1   0								0						
				Selected bits for resolution 0														
	Selected bits for resolution 1																	
			Selected bits for resolution 2															
					Se	lected	l bits f	or resc	olution	า 3								

## 18.7. Offset

The offset on the magnetic output of the MLX90395 can be adjusted. This is done by parameters OffsetX, OffsetY, and OffsetZ. Important to note is that the parameter is implemented as unsigned 16-bit code. This means that 0x8000 (default value) corresponds to no offset adjustment. Also important is that the offset is adjusted right on the 19-bit ADC value, so before the sensitivity adjustments, thermal compensations and resolution selection.

$$MAG = MAG - 4 \cdot OFFSET_{X/Y/Z}$$

## 18.8. Burst and WOC Parameters

In burst mode and in WOC mode, the rate of measurements can be selected, as well as the components to be measured. The rate is adjusted by BurstDataRate, in steps of 20ms (min = 0ms, max is 1260ms). This time is measured between the finish of the previous set of measurements and the start of the next set of measurements.

BurstSel selects the components to be measured if this is not given by the command initially. The bit order is Z (MSbit), Y, X, T (LSbit).

Selection between differential and absolute WOC mode is done with WOCDiff. Set to 1 for differential mode.

Finally, the thresholds for each of the components (X and Y, Z, T, and V) can be set by WocXYThreshold, WocZThreshold, WocTThreshold, and WocVThreshold.

WOCStart can be set to force the IC in WOC mode after power-on. **Note that this mode, if WOCStart is set, can never be ended.** No commands will be accepted, except for the RM command. But note that the data itself is not synchronized (same for CRC). This mode is intended for use only with the INT pin, not for communication.

#### 18.9. Thermal Drift

The user can choose to enable the temperature compensation. This is done with the TCmpEn parameter. Set it to enable the on-chip thermal offset drift and thermal sensitivity drift compensation.

Thermal sensitivity drift and thermal offset drift are trimmed by Melexis in order to minimize the error. In case the user wishes to change the parameters, this is possible but not recommended. For information, the formulas below show the usage of the parameters SensTCH, SensTCL (both always positive) and OffsetDrift\* (2's complement format).

Parameters denoted with L are for used for low temperatures, below TRef, parameters with H are for high temperatures, above TRef. Tref can only be set positive, and TRef[9:0] maps to T[13:4] of the output

#### MLX90395 Triaxis® Magnetometer Node

Datasheet



temperature value. With a slope of 50LSB/°C, this corresponds to a resolution of 0.32°C (=0.02<<4). All calculations are done on the 19-bit data.

First offset corrections: 
$$MAG = MAG - 4 \cdot Offset - \frac{\left[OffsetDrift \times \left(\frac{T_{OUT}}{2^4} - TRef\right)\right]}{2^6}$$

Then sensitivity corrections: 
$$MAG = MAG \times \left[1 + \frac{Sens}{2^9}\right] \times \left[1 + \frac{\left[\left(\frac{SensTC}{2^4}\right) \times \left(\frac{T_{OUT}}{2^4} - TRef\right)\right]}{2^{12}}\right]$$

In case temperature compensation is disabled, the red terms are not executed.

## 18.10. External Trigger

The MLX90395 provides an option to trigger single measurements by means of the TRG pin. To enable this pin, it needs to be configured accordingly.

TrigIntSel is used to change the function of the INT/TRG pin. In case it is set, the pin is an output and used as INT pin. In case it is 0, the pin becomes an input and can see the rising edge event.

ExtTrig is set to enable the single measurement by rising edge. Note that this is only active after an SM command has been executed, or a HS followed by reset.

## 18.11. NVRAM lock - Not available in BAA version

The NVRAM can be locked to avoid accidental rewriting of the settings in the application. It is basically disabling the writing commands. Two bits are available:

- Lock\_HS: locks the memory store command (HS); If stored, the memory can be changed but only the volatile section.
- Lock\_WR: locks the write register command (WR); If stored, the sensor is locked, and the volatile section cannot be changed.

This option is **not available in the BAA** version. In BAA version this content is 0.

#### 18.12. Other Controls

VMeasEN enables a voltage measurement. Here the supply voltage is measured. In case it is set to 0x0, even though the command might ask for a voltage measurement, the result will be 0. Also in burst mode, when the zyxt in the command is empty, this parameter is used to determine doing the voltage measurement or not.

HallConf and ZSeries are not to be touched. It is recommended to keep HallConf to 0x0 and ZSeries to 0x0 for optimal performance. Note that in both cases of ZSeries, the Z-field can be measured.



# 19. Recommended Application Diagrams

In case of long cable length or wire harness, it is recommended to add a series resistor on the communication lines (including INT and INT/TRIG) close to the IC to reduce coupling. The value has to be evaluated carefully to keep EMC emissions to a minimum.

## 19.1. Wiring with the MLX90395 in SOIC-8/TSSOP-16 Package

## 19.1.1. SPI Mode

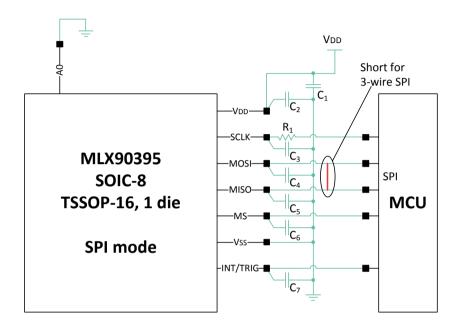


Figure 26: Application diagram SOIC-8 or TSSOP-16 (only one die represented) in SPI mode



Component	Standard	d routing		EMC rob	ust routir	ıg	Remark
Component	Min.	Тур.	Max.	Min.	Тур.	Max.	, neman
$C_1$	100nF		1μF	100nF		1μF	
C <sub>2</sub> (21)					100pF		
C <sub>3</sub> (21, 22)			18pF			12pF	$f_{SCLK} = 10MHz$
C <sub>3</sub> (21, 22)			110pF			82pF	$f_{SCLK} = 2MHz$
C <sub>3</sub> (21, 22)		47pF	220pF		47pF	160pF	$f_{SCLK} = 1MHz$
C <sub>4</sub> (21)					47pF		
C <sub>5</sub> (21)					47pF		
$C_6^{(21)}$					220pF		> C <sub>3</sub> for improved immunity
C <sub>7</sub> (21)					100pF		
$R_1$					100Ω		For improved filtering

Table 25: Recommended values for SOIC-8 or TSSOP-16 (one die) in SPI mode, BAA version

Component	Standard	routing		EMC robust routing			Remark
Component	Min.	Тур.	Max.	Min.	Тур.	Max.	The man is
$C_1$	100nF		1μF	100nF		1μF	
C <sub>2</sub> (21)					100pF		
C <sub>3</sub> (21)		-			-		
C <sub>4</sub> (21)					-		
C <sub>5</sub> (21)					47pF		
C <sub>6</sub> (21)					_		> C <sub>3</sub> for improved immunity
C <sub>7</sub> <sup>(21)</sup>					100pF		
$R_1$		-			_		

Table 26: Recommended values for SOIC-8 or TSSOP-16 (one die) in SPI mode, BBA version

 $<sup>^{21}</sup>$  Place at the pin, keep connection below 1mm and use ground via. MCU assumed to have output impedance of  $300\Omega$ .

 $<sup>^{22}</sup>$  Values calculated for rapid flanks,  $f_{co}$  = 1/(2 $\pi$ RC), and are strongly dependent on driver strength and cable length.



# 19.1.2. I<sup>2</sup>C Mode

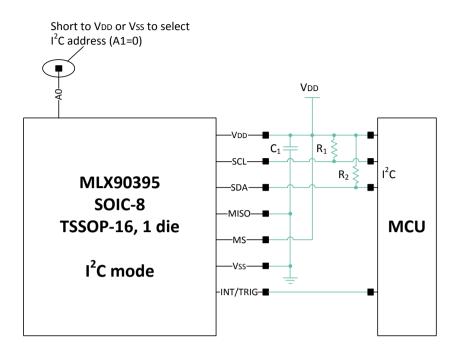


Figure 27: Application diagram SOIC-8 or TSSOP-16 (only one die represented) in I<sup>2</sup>C mode

Component	Min.	Тур.	Max.	Remark
$C_1$	100nF		1μF	
$R_1$		10kΩ		On MCU side, if not internal
$R_2$		10kΩ		On MCU side, if not internal

Table 27: Recommended values for SOIC-8 or TSSOP-16 (one die) in I<sup>2</sup>C mode



# 19.2. Wiring with the MLX90395 in QFN-16 Package

The bottom pad of the QFN package is not connected internally. Grounding is advised to increase robustness against mechanical shocks and improve EMC performance.

## 19.2.1. SPI Mode

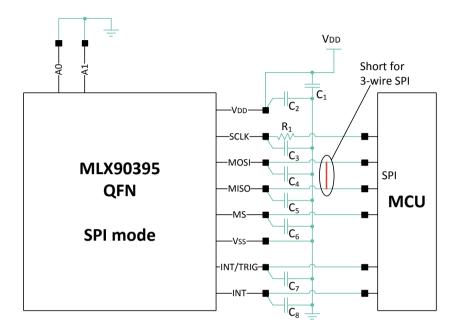


Figure 28: Application diagram QFN-16 in SPI mode



Component	Standard	d routing		EMC rob	ust routir	ng	Remark
Component	Min.	Тур.	Max.	Min.	Тур.	Max.	
$C_1$	100nF		1μF	100nF		1μF	
$C_2^{(23)}$					100pF		
C <sub>3</sub> (23, 24)			18pF			12pF	$f_{SCLK} = 10MHz$
C <sub>3</sub> (23, 24)			110pF			82pF	$f_{SCLK} = 2MHz$
C <sub>3</sub> (23, 24)		47pF	220pF		47pF	160pF	$f_{SCLK} = 1MHz$
C <sub>4</sub> (23)					47pF		
C <sub>5</sub> (23)					47pF		
$C_6^{(23)}$					220pF		> C <sub>3</sub> for improved immunity
C <sub>7</sub> (23)					100pF		
C <sub>8</sub> (23)					100pF		
$R_1$					100Ω		For improved filtering

Table 28: Recommended values for QFN-16 in SPI mode, BAA version

Component	Standard	d routing		EMC rob	ust routir	ng	Remark
Join ponding	Min.	Тур.	Max.	Min.	Тур.	Max.	
$C_1$	100nF		1μF	100nF		1μF	
C <sub>2</sub> (23)					100pF		
C <sub>3</sub> (23)		-			-		
C <sub>4</sub> (23)					-		
C <sub>5</sub> (23)					47pF		
$C_6^{(23)}$					-		> C <sub>3</sub> for improved immunity
C <sub>7</sub> (23)					100pF		
C <sub>8</sub> (23)					100pF		
$R_1$		-			-		

Table 29: Recommended values for QFN-16 in SPI mode, BBA version

 $<sup>^{23}</sup>$  Place at the pin, keep connection below 1mm and use ground via. MCU assumed to have output impedance of  $300\Omega$ .

 $<sup>^{24}</sup>$  Values calculated for rapid flanks,  $f_{co}$  = 1/(2 $\pi$ RC), and are strongly dependent on driver strength and cable length.



# 19.2.2. I<sup>2</sup>C Mode

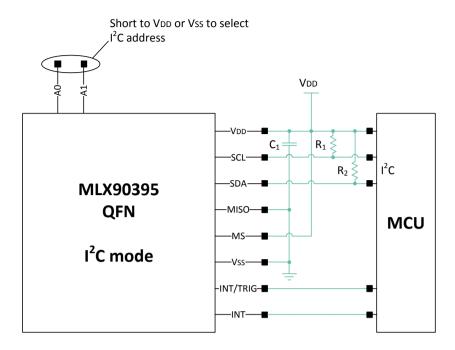


Figure 29: Application diagram QFN-16 in I<sup>2</sup>C mode

Component	Min.	Тур.	Max.	Remark
$C_1$	100nF		1μF	
$R_1$		10kΩ		On MCU side, if not internal
$R_2$		10kΩ		On MCU side, if not internal

Table 30: Recommended values for QFN-16 in I<sup>2</sup>C mode



# 20. Standard information regarding manufacturability of Melexis products with different soldering processes

Our products are classified and qualified regarding soldering technology, solderability and moisture sensitivity level according to standards in place in Semiconductor industry.

For further details about test method references and for compliance verification of selected soldering method for product integration, Melexis recommends reviewing on our web site the General Guidelines soldering recommendation (<a href="http://www.melexis.com/en/quality-environment/soldering">http://www.melexis.com/en/quality-environment/soldering</a>)

For all soldering technologies deviating from the one mentioned in above document (regarding peak temperature, temperature gradient, temperature profile etc.), additional classification and qualification tests have to be agreed upon with Melexis.

For package technology embedding trim and form post-delivery capability, Melexis recommends consulting the dedicated trim&form recommendation application note: lead trimming and forming recommendations (<a href="http://www.melexis.com/en/documents/documentation/application-notes/lead-trimming-and-forming-recommendations">http://www.melexis.com/en/documents/documentation/application-notes/lead-trimming-and-forming-recommendations</a>).

Melexis is contributing to global environmental conservation by promoting lead free solutions. For more information on qualifications of RoHS compliant products (RoHS = European directive on the Restriction Of the use of certain Hazardous Substances) please visit the quality page on our website: <a href="http://www.melexis.com/en/quality-environment">http://www.melexis.com/en/quality-environment</a>.

## 21. ESD Precautions

Electronic semiconductor products are sensitive to Electro Static Discharge (ESD). Always observe Electro Static Discharge control procedures whenever handling semiconductor products.



# 22. Package Information

# 22.1. SOIC-8 Package

# 22.1.1. SOIC-8 - Package Dimensions

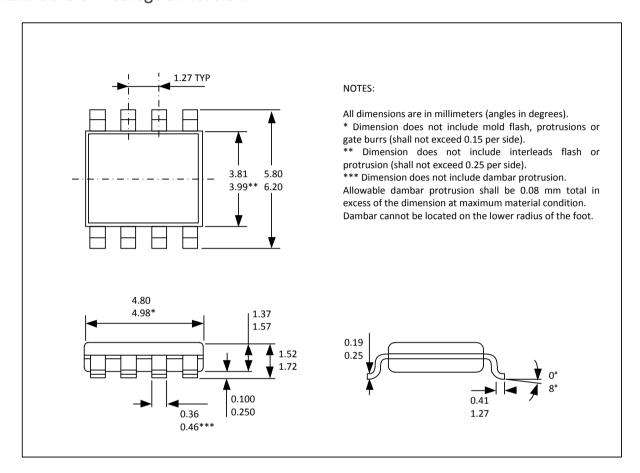


Figure 30: SOIC-8 Package Dimensions

REVISION 5.0 - JUNE 18, 2020 Page 49 of 55



# 22.1.2. SOIC-8 - Pinout and Marking

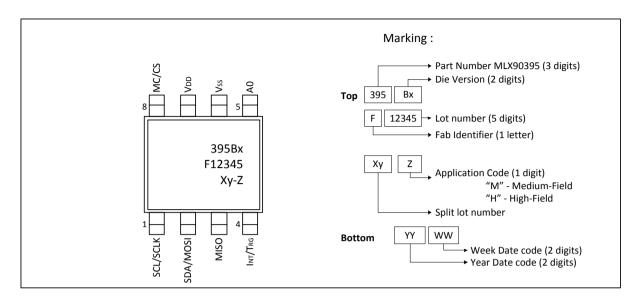


Figure 31: SOIC-8 Pinout and Marking

# 22.1.3. SOIC-8 - Sensitive Spot Location

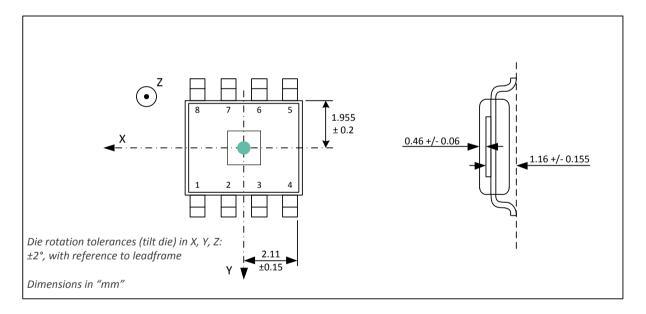


Figure 32: SOIC-8 Sensitive Spot Location

REVISION 5.0 - JUNE 18, 2020 Page 50 of 55



# 22.2. TSSOP-16 Package

# 22.2.1. TSSOP-16 - Package Dimensions

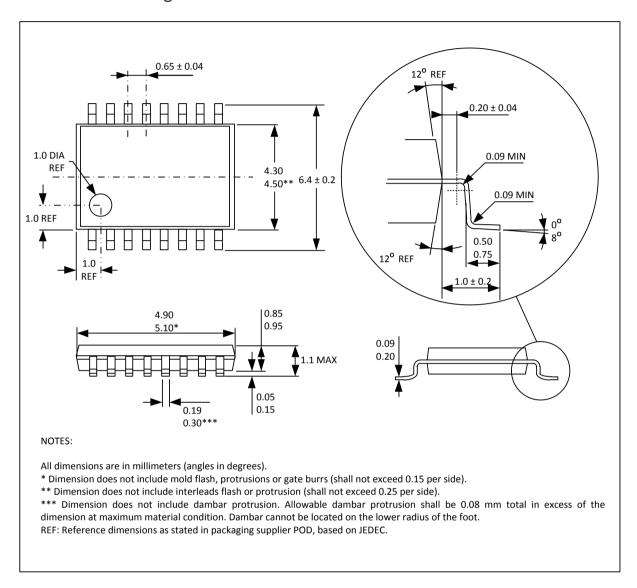


Figure 33: TSSOP-16 Package Dimensions

REVISION 5.0 - JUNE 18, 2020 Page 51 of 55



# 22.2.2. TSSOP-16 - Pinout and Marking

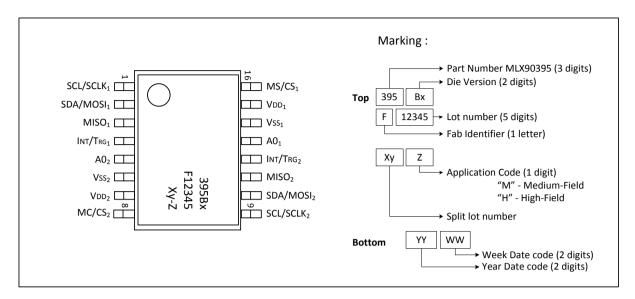


Figure 34: TSSOP-16 Pinout and Marking

# 22.2.3. TSSOP-16 - Sensitive Spot Location

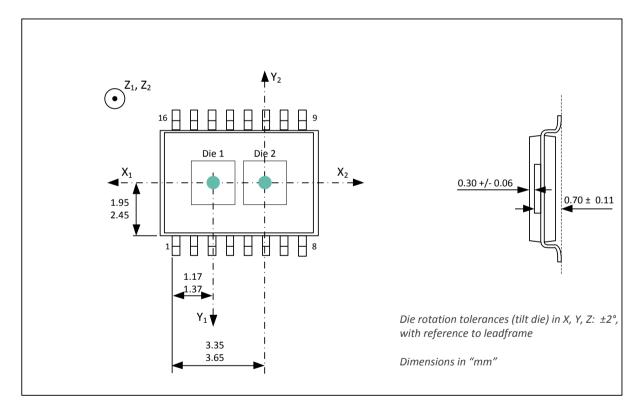


Figure 35: TSSOP-16 Sensitive Spot Location



# 22.3. QFN-16 Package

# 22.3.1. QFN-16 - Package Dimensions and Sensitive Spot Location

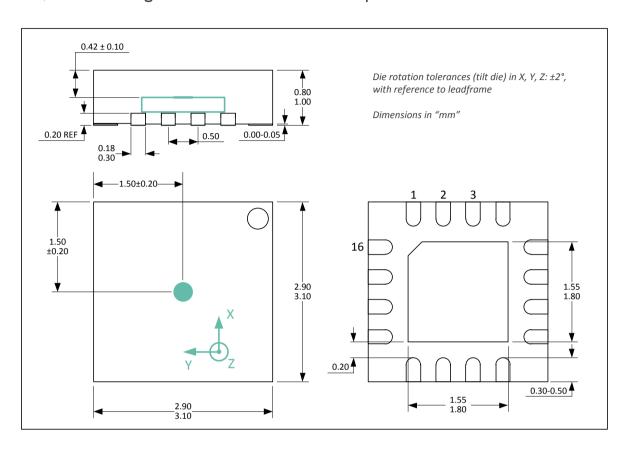


Figure 36: QFN-16 Package Dimensions and Sensitive Spot Location

# 22.3.2. QFN-16 - Pinout and Marking (BAA version)

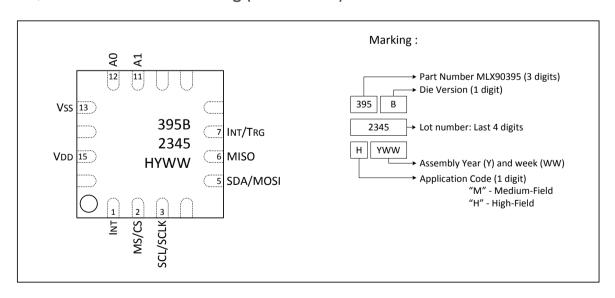


Figure 37: QFN-16 Pinout and Marking (BAA version)

REVISION 5.0 - JUNE 18, 2020 Page 53 of 55



# 22.3.3. QFN-16 - Pinout and Marking (BBA version)

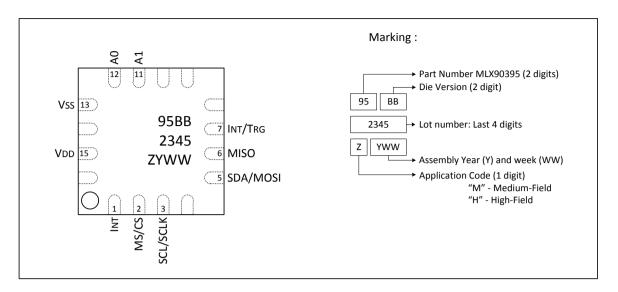


Figure 38: QFN-16 Pinout and Marking (BBA version)

# 22.4. Package Thermal Performances

The table below describes the thermal behaviour of available packages following JEDEC EIA/JESD 51.X standard.

Package	Junction to Case - θjc	Junction to Ambient - θja (JEDEC 1s2p board)	Junction to Ambient - θja (JEDEC 1s0p board)
SOIC-8	38.8 K/W	112 K/W	153 K/W
TSSOP-16	27.6 K/W	99.1 K/W	137 K/W
QFN-16	21 K/W	185 K/W	213 K/W

Table 31: Package Thermal Performance

## MLX90395 Triaxis® Magnetometer Node

Datasheet



#### 23. Contact

For the latest version of this document, go to our website at http://www.melexis.com.

For additional information, please contact our Direct Sales team and get help for your specific needs:

Europe, Africa	Telephone: +32 13 67 04 95
	Email: sales_europe@melexis.com
Americas	Telephone: +1 603 223 2362
	Email: sales_usa@melexis.com
Asia	Email: sales_asia@melexis.com

## 24. Disclaimer

The content of this document is believed to be correct and accurate. However, the content of this document is furnished "as is" for informational use only and no representation, nor warranty is provided by Melexis about its accuracy, nor about the results of its implementation. Melexis assumes no responsibility or liability for any errors or inaccuracies that may appear in this document. Customer will follow the practices contained in this document under its sole responsibility. This documentation is in fact provided without warranty, term, or condition of any kind, either implied or expressed, including but not limited to warranties of merchantability, satisfactory quality, non-infringement, and fitness for purpose. Melexis, its employees and agents and its affiliates' and their employees and agents will not be responsible for any loss, however arising, from the use of, or reliance on this document. Notwithstanding the foregoing, contractual obligations expressly undertaken in writing by Melexis prevail over this disclaimer.

This document is subject to change without notice, and should not be construed as a commitment by Melexis. Therefore, before placing orders or prior to designing the product into a system, users or any third party should obtain the latest version of the relevant information.

Users or any third party must determine the suitability of the product described in this document for its application, including the level of reliability required and determine whether it is fit for a particular purpose.

This document as well as the product here described may be subject to export control regulations. Be aware that export might require a prior authorization from competent authorities. The product is not designed, authorized or warranted to be suitable in applications requiring extended temperature range and/or unusual environmental requirements. High reliability applications, such as medical life-support or life-sustaining equipment or avionics application are specifically excluded by Melexis. The product may not be used for the following applications subject to export control regulations: the development, production, processing, operation, maintenance, storage, recognition or proliferation of:

- 1. chemical, biological or nuclear weapons, or for the development, production, maintenance or storage of missiles for such weapons;
- 2. civil firearms, including spare parts or ammunition for such arms;
- 3. defense related products, or other material for military use or for law enforcement;
- 4. any applications that, alone or in combination with other goods, substances or organisms could cause serious harm to persons or goods and that can be used as a means of violence in an armed conflict or any similar violent situation.

No license nor any other right or interest is granted to any of Melexis' or third party's intellectual property rights.

If this document is marked "restricted" or with similar words, or if in any case the content of this document is to be reasonably understood as being confidential, the recipient of this document shall not communicate, nor disclose to any third party, any part of the document without Melexis' express written consent. The recipient shall take all necessary measures to apply and preserve the confidential character of the document. In particular, the recipient shall (i) hold document in confidence with at least the same degree of care by which it maintains the confidentiality of its own proprietary and confidential information, but no less than reasonable care; (ii) restrict the disclosure of the document solely to its employees for the purpose for which this document was received, on a strictly need to know basis and providing that such persons to whom the document is disclosed are bound reproduce document only to the extent necessary for such purposes; (ii) not use the document only in connection with the purpose or to the detriment of Melexis or its customers. The confidentiality obligations set forth in this disclaimer will have indefinite duration and in any case they will be effective for no less than 10 years from the receipt of this document.

This disclaimer will be governed by and construed in accordance with Belgian law and any disputes relating to this disclaimer will be subject to the exclusive jurisdiction of the courts of Brussels, Belgium.

The invalidity or ineffectiveness of any of the provisions of this disclaimer does not affect the validity or effectiveness of the other provisions. The previous versions of this document are repealed.

Melexis © - No part of this document may be reproduced without the prior written consent of Melexis. (2020)

IATF 16949 and ISO 14001 Certified

REVISION 5.0 - JUNE 18, 2020 Page 55 of 55

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

# Melexis:

<u>MLX90395KDC-BBA-001-SP</u> <u>MLX90395KDC-BBA-101-SP</u> <u>MLX90395KGO-BBA-001-SP</u> <u>MLX90395KGO-BBA-101-SP</u> <u>MLX90395KLW-BBA-101-SP</u> <u>MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-MLX90395KLW-M</u>